

TS100

FW

What is the difference between TS100-HUCB00-SG and

TS100-ICB00-SG?

TS100-SUCB00-SG goes with the engine:7250 and USB cable 2 meters length for general purpose.

TS100-HUCB00-SG goes with the engine:7200DHS(specific DOF) and USB cable 2.7 meters length for DM barcode in cigarette box of Russia.

Would like to read qr codes from a smartphone screen.

Please refer to TS100 manual in chapter 3.22 "QR Code URL Link" to enable URL link reading.