




Connecting the Scanner

Follow the steps below to connect the scanner:

1. Insert the USB connector into the port on the scanner.
2. Connect the USB connector of the USB cable to the USB port of a host PC.

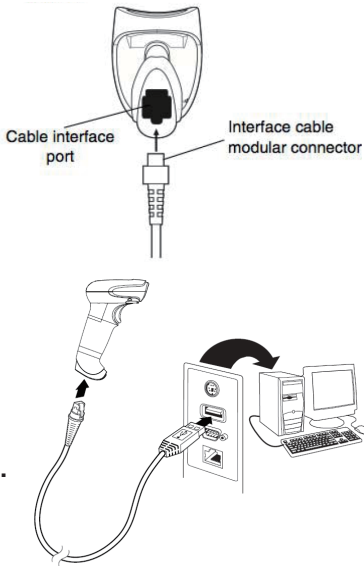

Trigger Mode

Manual Trigger-Normal *



Presentation Mode



Aimer Mode

Interlaced *



Off



Mobile Phone Read Mode

Hand Held Scanning -
Mobile Phone



Presentation Scanning -
Mobile Phone



Factory Default

Factory Default



Suffix

Add CR Suffix



Add Tab Suffix



Remove Suffix



Language Selection

US English*



UK English



Italian



Italian (142)



Spanish



Spanish Variation



French



German



Swedish



Switzerland (German)



Switzerland (French)



Hungarian



Hungarian (101 key)



Denmark



Japanese



Belgium



Portuguese



Netherlands



Turkey-F



Turkey-Q



* : Default Option

For more detailed scanner setting, please go to www.ute.com to download the user manual and the scanner configuration manager utility.

Symbolologies		
Interleaved 2 of 5 ON* OFF Default All Interleaved 2 of 5 Settings	UPC-A ON* OFF Default All UPC-A Settings	EAN/ JAN-13 ON* OFF Default All EAN/ JAN -13 Settings
EAN/ JAN-8 ON* OFF Default All EAN/ JAN-8 Settings	Code 39 ON* OFF Default All Code 39 Settings	GS1-128 ON* OFF Default All GS1-128 Settings
UPC-E0 ON* OFF Default All UPC-E Settings		
UPC-E1 ON OFF*		
Code 128 ON* OFF Default All Code 128 Settings	Codabar ON* OFF Default All Codabar Settings	MaxiCode ON* OFF Default All MaxiCode Settings
QR Code ON* OFF Default All QR Code Settings	Data Matrix ON* OFF Default All Data Matrix Settings	PDF 417 ON* OFF Default All PDF 417 Settings