


- TB110 Rugged Tablet -

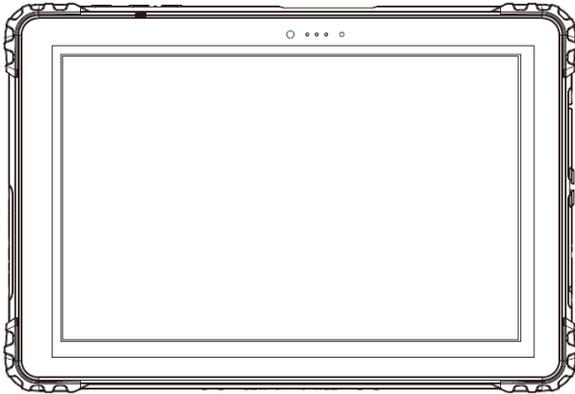

Quick Start Guide

V1.0

Package

Please make sure the following contents are in the TB110 gift box. If something is missing or damaged, please contact your unitech representative.

 
The package contents

- TB110 Rugged Tablet
- Power Adapter + Plugs (EU,US, UK and AU)
- Quick Start Guide


Optional accessories

- Desktop Docking
- X-Hand Strap
- Stylus

Product View




Camera LED
Front Camera
Power LED
Charging LED
Light Sensor

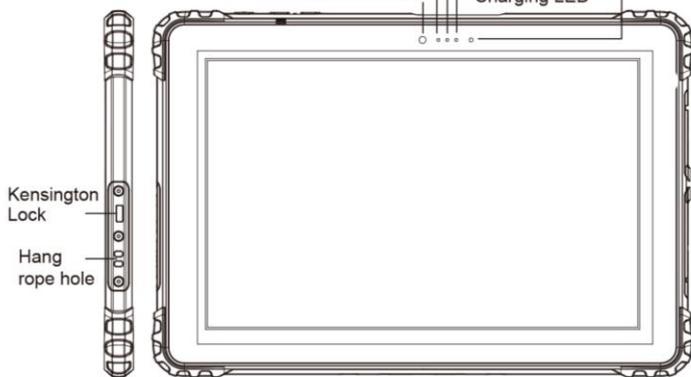


3.5mm Headset
USB 3.0
USB 2.0
DC Jack
Mic



Docking
Contact Pins

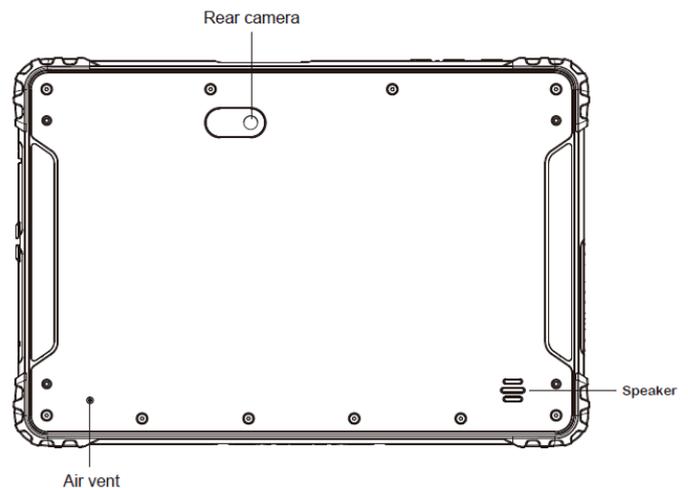


Checking LED Status

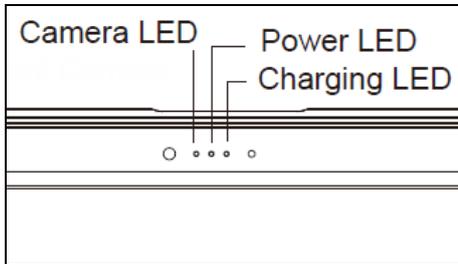

Camera LED	Description
Solid White Light	When the camera is on.
Power LED	Description
Solid Green Light	When the tablet is on.
Charging LED	Description
Solid Green Light	Battery fully charged
Solid Red Light	Battery charging

Insert / Remove Micro SD card

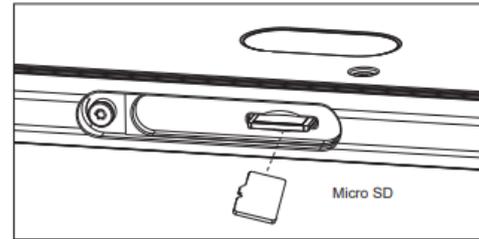

Open the rubber cover, and:

- To insert the Micro SD card, push the Micro SD card into the slot until you feel the card click into place.
- To remove the Micro SD card from the slot, press the card in and release. The card pops out.

WARNING! *There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.*

- CAUTION!**
- *To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.*
 - *If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.*

For other product documentation, please scan the QR code below for more information.

