

MS852

Accessory

How to which USB cable can be use?

please refer to the MS84X&MS85X-USB cable list

Scanner Model	Original version	Separated versions from ESD and non ESD	consolidated version (ESD)
MS840/MS842/MS851/MS852(+)	1550-900127G	1550-905914G	1550-905920G
MS851B/MS852B(+)	1550-905890G		
MS840/MS842/MS851/MS852(+) ESD	1550-900093G		
MS851B/MS852B(+) ESD	1550-905904G		

Decoder

Have MS852+ supported ALT+Numpad(3/4 digits) output?

It didn't support this.

How MS852 & MS852+ output GS1-28, GS1-DM with Bracket?

It didn't support this.

Can MS852 read PDF417 Colombian?

Yes, it can be supported.



Document

MS852 AS & MS852+AS fail out put GB2312.

It didn't support this.

FW

Do MS852 support OPOS?

Yes.

please use FW version PAADLS00-002-R00 or later .

Aimer will disappeared after 10 mins scan in Persentation (Blink)

or Auto Aim with Illumination?

It is engine's heat protection mechanism.

Does MS852LR keep long-range decoding in Automatic aiming mode?

No, When in automatic trigger mode (Presentation, Auto Aim or Auto Aim with Lighting) the reading distance of the engine is limited.

Automatic aiming with lighting automatic aiming is auxiliary
Presentation mode when used in a "low light" or even "full black" environment,
To assist in triggering the scan action, so it needs to keep DOF at a short distance
for motion detection



HW

MS852 & MS852+ can't use RS232 cable?

MS852 (MS852-2UCB00-SG)& MS852+ (MS852-ZUCB00-SG) are all USB interface , GOC have RS-232 SKU for it , such like MS852-2RCB00-SG you can distinguish by second letter as MS852-2"R"CB00-SG for RS-232 and MS852-2"U"CB00-SG for USB.

