

# **MS852LR**

2D Long Range Barcode Scanner

#### **Quick Start Guide**



### **Connecting the Scanner**

Connect USB cable to the **USB 3.0** port of a host PC.



Note: Y cable is designed for the PC or notebook without USB 3.0 port in order to get additional power supply from two USB 2.0 ports. Or you can connect MS852LR to a USB 3.0 port directly without Y cable.

### **USB Device Type**

USB Keyboard HID\*



Symbol Native API (SNAPI) without Imaging Interface



Symbol Native API (SNAPI) with Imaging Interface



SSI over USB CDC



**USB CDC Host** 



#### **Factory Default**



Display F/W Version



USB HID POS (for Windows 10 devices only)



#### **Reading Mode**

Trigger (Level) \*



Presentation (Blink)



Host



Auto Aim



Auto Aim with Illumination



## **Beep After Good Decode**

Enable Beep After Good Decode \*



Disable Beep After Good Decode



#### **Beep Volume**

High Volume\*



Medium Volume



Low Volume



#### **Beep Tone**

High Beep Tone



Medium Beep Tone\*



Low Beep Tone



Disable Beep Tone



#### \* : Default Option



# MS852LR

2D Long Range Barcode Scanner

#### **Quick Start Guide**

## **Beep Duration**

Medium Duration\*



**Short Duration** 



**Long Duration** 



#### **LED on Good Decode**

Enable Decode LED \*



Disable Decode LED



## **USB Country Keyboard Types**

North American Standard USB Keyboard\*



French Windows



French Canadian Windows 95/98



Spanish Windows



Portuguese-Brazilian Windows



German Windows



French Canadian Windows 2000/XP



French Belgian Windows



Swedish Windows



Japanese Windows (ASCII



**UK English Windows** 



Italian Windows





