


MS852

2D Imager Barcode Scanner

Quick Start Guide

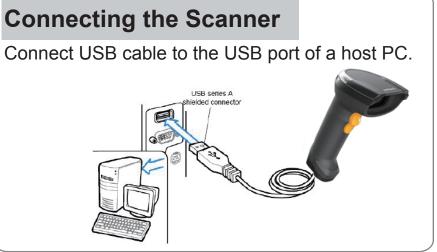



USB Device Type

USB HID Keyboard*



USB CDC Host



SNAPI for SCM Setting



Factory Default



Display F/W Version



Reading Mode

Trigger (Level) *



A trigger press activates decode processing. Decode processing continues until the bar code decodes, you release the trigger.

Presentation (Blink)



The engine activates decode processing when it detects a bar code in its field of view. After a period of non-use, the LEDs turn off until the engine senses motion.

Auto Aim



The engine projects the aiming pattern when it senses motion. A trigger press activates decode processing. After two seconds of inactivity the aiming pattern shuts off.

Auto Aim with Illumination



The engine turns on the aiming pattern and internal illumination LEDs when it senses motion. A trigger press activates decode processing. After two seconds of inactivity the aiming pattern and internal illumination LEDs automatically shut off.

MS852

2D Imager Barcode Scanner

Quick Start Guide

Beep After Good Decode

Enable Beep After Good Decode *



Disable Beep After Good Decode



Beeper Volume

Low Volume



Medium Volume



High Volume*



Beeper Tone

Low Tone



Medium Tone*



High Tone



LED on Good Decode

Enable LED on Good Decode *



Disable LED on Good Decode



USB Country Keyboard Types

North American Standard USB Keyboard*



French Windows



French Canadian Windows 95/98



Spanish Windows



Portuguese-Brazilian Windows



German Windows



French Canadian Windows 2000/XP



French Belgian Windows



Swedish Windows



Japanese Windows (ASCII)



UK English Windows



Italian Windows

