




Connecting the Scanner

Connect USB cable to the USB port of a host PC.

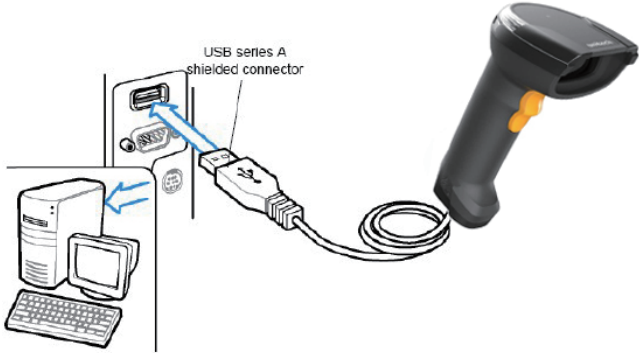

Barcode Programming

Before starting scanning any setting barcode, please do follow the instruction below.

Scanning the Enter Setup barcode can enable the engine to enter the setup mode. Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the Exit Setup barcode.


Enter Setup



Exit Setup *



Factory Default

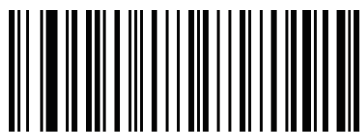

Product Information



USB Device Type

USB HID-KBW



USB CDC



USB HID-POS



Aiming On /Off

Normal *



Off



Always On



Scan Mode

Trigger mode



A trigger pull activates a decode session.

Sense Mode*



The engine activates a decode session every time it detects a barcode presented to it.

Continuous Mode



The engine automatically starts one decode session after another.

Enable/Disable All Prefixes/Suffixes

Enable All Prefixes/Suffixes



Disable All Prefixes/Suffixes



Good Read LED

Good Read LED ON *



Good Read LED OFF



* : Default Option

Thank you for purchasing the unitech product.
For other product documentation, please scan the QR code for more information.



Good Read Beep

On*



Off



Beeper Volume

Low Volume



Medium Volume



High Volume*



Good Read Beep Frequency

Low Tone



High Tone



Extra Low Tone



Medium Tone*



USB Country Keyboard Types

United States*



Japan



Denmark



Finland



France



Turkey_F



Italy



Norway



Spain



UK



Turkey_Q



Austria, Germany



Belgium



Sweden



Russia



Portugal



* : Default Option

Thank you for purchasing the unitech product.
For other product documentation, please scan the QR code for more information.

