

HT730 Boot Case



Quick Start Guide

V1.1

How to remove the boot case from HT730

1). Grab the boot case from the middle, and pry HT730 from the boot case.



2). Pry the boot case from both edge of the top corner, and take HT730 out.



How to put the boot case on HT730

1). Slide HT730 into the bottom of boot case.



2). Snap in the top two corners of HT730 into the boot case, and make sure HT730 is secured in the boot case.



Notice: Please be noted the boot case is not for Long Range Engine version. The boot case is only for Standard Range Engine and without Engine version.



http://www.ute.com/